


NS-LTDVD26

ATTACHING/DETACHING THE DVD UNIT

Before attaching/detaching DVD unit:

- Before detaching (or attaching) the DVD unit, unplug the AC cord from the AC input terminal.
- Before performing work make sure to turn off the TV.
- Before performing work spread cushioning over the base area to lay the Display on. This will prevent it from being damaged.

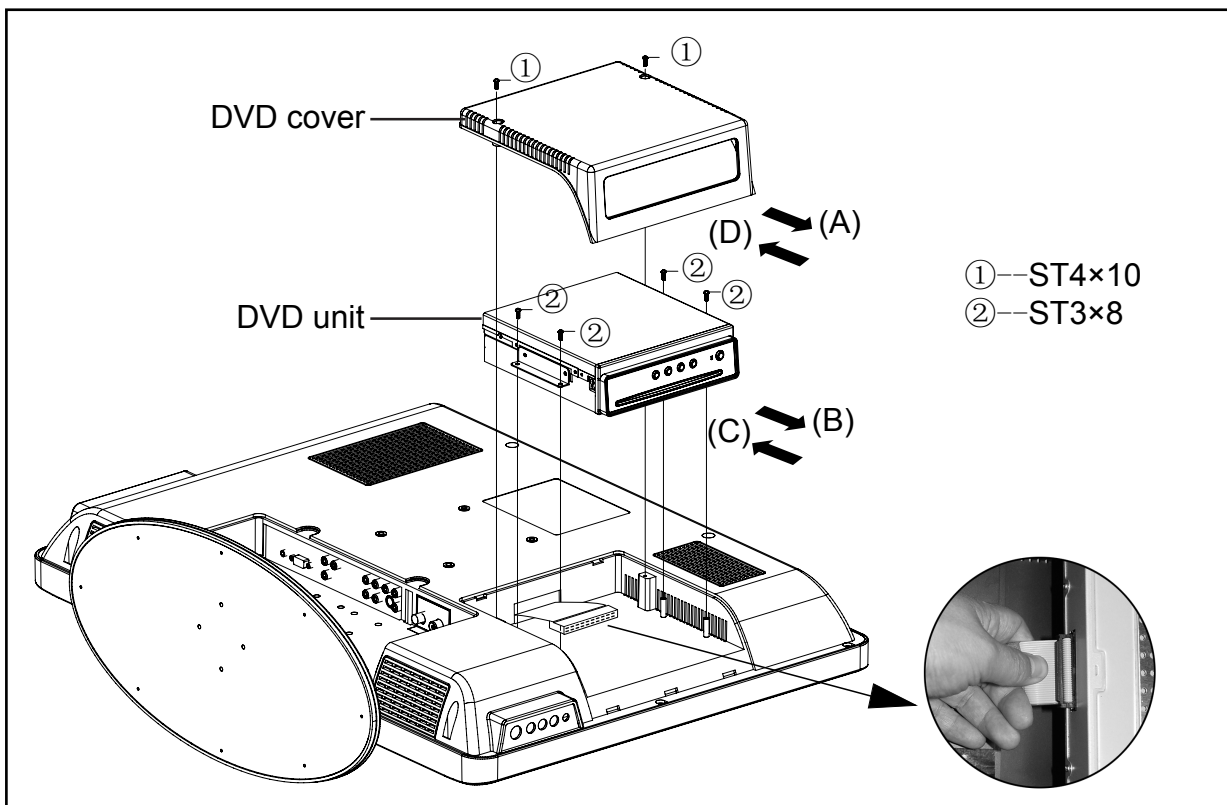

Detaching the DVD unit:

1. Remove the two screws ①.
2. Remove the DVD cover in the direction of arrow (A).
3. Remove the four screws ②.
4. Disconnect the connection between DVD unit and LCD TV as shown in the illustration.
5. Remove the DVD unit in the direction of arrow (B).

Attaching the DVD unit:

1. Attach the DVD unit in the direction of arrow (C).
2. Connect the connection between DVD unit and LCD TV as shown in the illustration.
3. Fasten the four screws ②.
4. Attach the DVD cover in the direction of arrow (D).
5. Fasten the two screws ①.